



1

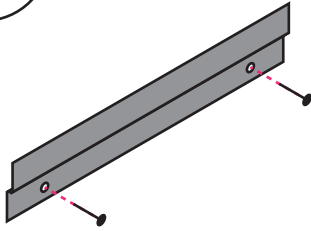

SECURE METAL CLEAT TO WALL AT DESIRED POSITION, MAKING SURE ORIENTATION IS OPEN AT TOP WITH SCREWS AT BOTTOM

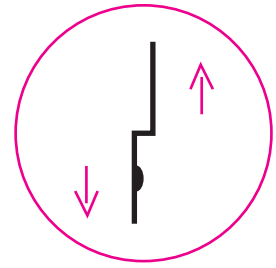

(ALWAYS USE HARDWARE APPROPRIATE FOR WALL MATERIAL. DRYWALL MAY REQUIRE ADDITIONAL ANCHORS OR HARDWARE FOR SECURE ATTACHMENT)

2

WITH SHELVING UNIT FLUSH AGAINST WALL, SLIDE DOWN UNTIL UNIT IS FIRMLY SEATED BEHIND METAL CLEAT

